

HOW TO SET PARENTAL CONTROL RESTRICTIONS

Home Menu > Settings > Parental Control

Customize the available setting below to configure Parental Controls.

1. Status **PLEASE NOTE:** All blocking is **DISABLED** by default.

Enable or disable parental controls on programs and/or programming information including box art images. If enabled, this status will be applied to all programs above rating limit selected in **Step 2**.

Choose:

Video Blocked: Acces to video content is blocked

Video and Information Blocked: Both video content and title/description information is blocked.

2. Rating Limit: Select maximum rating level allowed without PIN

Choose:

TV-Y - All children (*Default*)

TV-Y7 - Directed to older children

TV-G - General audience

TV-PG - Parental guidance

TV-14 - Parents strongly cautioned

TV-MA - Mature audience only (View all)

3. Blocked Channels

Select and manage list of channels you would like blocked with Parental Controls. When enabled, your Parental Control PIN will be required to unlock the channel.

4. PIN is Requirements

Choose to 'ALWAYS' to require a PIN each time blocked content is selected OR choose a specific time frame the PIN will disable Parental Controls.

Choose:

ALWAYS *(Default)*

2, 4, 8, 12 or 24 HOURS

5. PIN to Purchase

Enable or disable the need to enter your Parental Control PIN every time you want to rent content and/or subscribe to a TV package.

Choose:

ENABLED | DISABLED *(Default)*

6. PIN Number

Choose your own PIN used to unlock content

Default PIN: **1111**

Important!!!

Once a PIN is entered to unlock content above your Parental Control Rating, it will remain UNLOCKED. You MUST power the media player off/on to reactivate the Parental Control.

For more information visit Viya.vi
or call **340-777-VIYA**

Viya